



CROSS BAR

screw hole

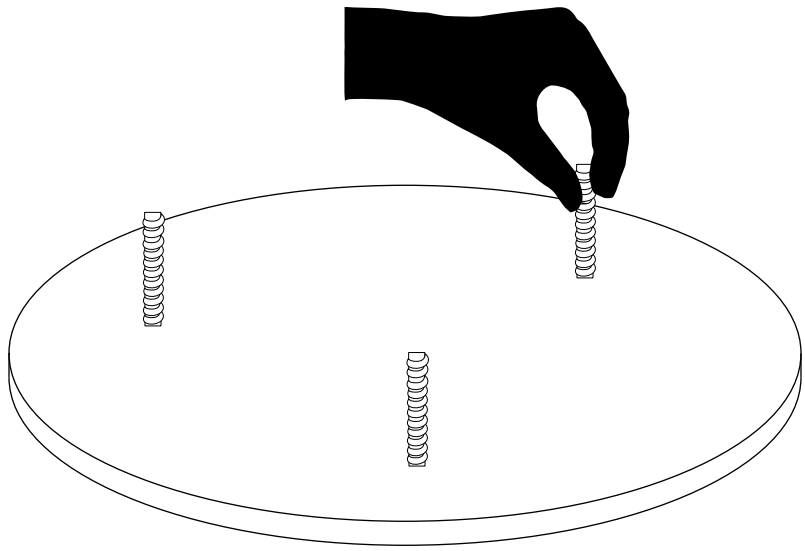

1. Hand-tighten set screws.

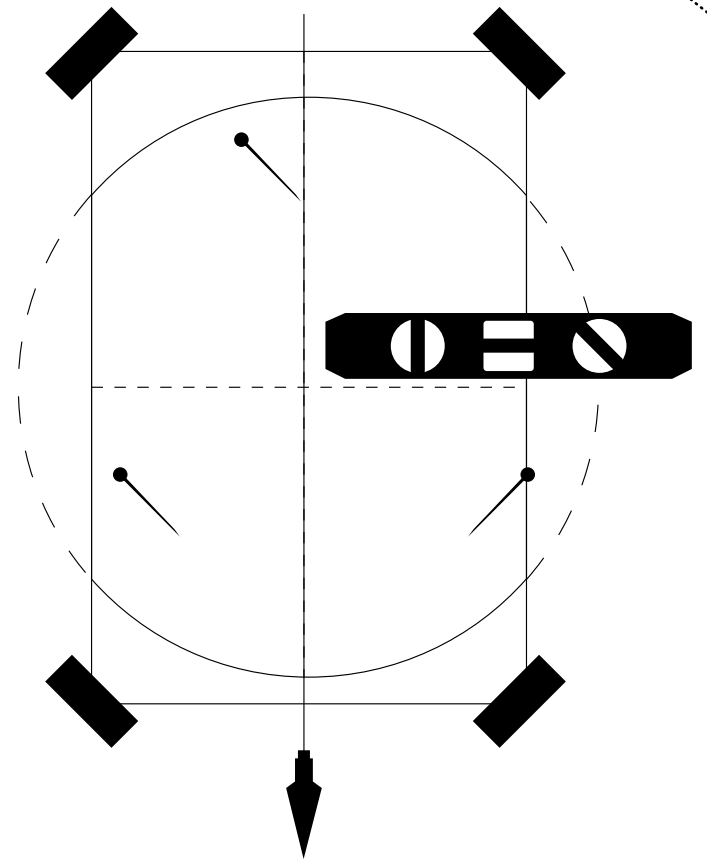


- 2. Tape this instruction sheet to the wall in the position in which you want to install the plaque. Use low tack painter's tape and level this sheet using the cross bars.
- 3. Mark screw holes with something sharp for screw positions.
- 4. Remove the instruction sheet.

CROSS BAR

- 5. Drill holes with 1/8" drill bit.
- 6. Apply Liquid Nail™ or construction glue in holes and on the back of the plaque.

- 7. Install the plaque.
- 8. Hold in place with a clean cloth until the glue is holding.

screw hole

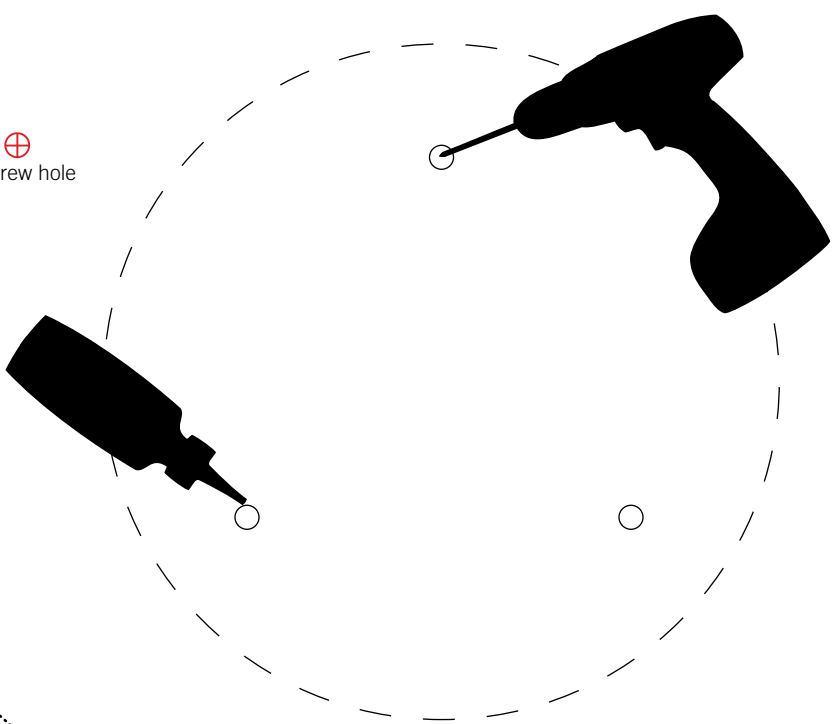

screw hole

