

# Ready-to-apply vinyl application instructions

**Step 1**




Apply a piece of masking tape to each corner on the top of your decal and adjust until your graphic is level and centered where you want it to be.

**Step 2**



when the graphic is in the correct position, apply a long strip of masking tape to the top edge (or side) to create a "hinge".

**Step 3**

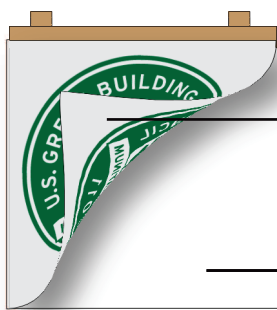


Clear Mask & Vinyl Decal Together  
Release Liner

Separate the clear mask & vinyl decal from the release liner

**Step 4**



Discard the release liner.

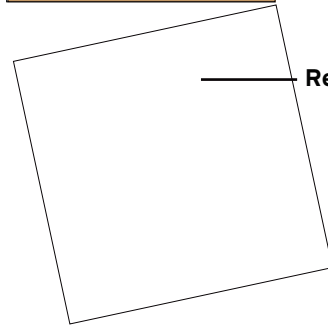

**Step 5**



Using a vinyl squeegee or similar piece of plastic, slowly work your way across the graphic starting at the hinge while holding the bottom end of the graphic away from the surface with your free hand.

**Step 6**



Remove the clear mask from the decal at a 45 degree angle.